

Panasonic short manual

Drive I/p connections: L- PHASE, N-NEUTRAL

Drive o/p connections: U, V, W TO MOTOR

Control terminals: NO.4-door close limit signal

No.7-door close slowdown signal

NO.6-door open slow down signal

NO.3-door open limit signal

NO.8-door common signal

NO.1- door open signal

NO.2-door close signal

Door feedback signals: Door close limit signal-C3 (com), B3 (nc), A3 (no)

Door open limit signal-C2 (com), B2 (nc), A2 (no)

Drive program:

P-region parameters:

P P42-1, P08-2, P09-4, P74-1

D-region parameters:

D14-3.0(close hold),D15-6.0(open start),D17-20(open high),D20-6.0(open slow),D21-3.0(open hold),D22-10(close start),D24-18.0(close high),D27-6.0(close slow),D40-0.4,D41-0.3,D43-4.0,D44-4.0

Check the operation by giving door open and door close command.

Note: for reset the drive put parameter P42-1 (for restore the parameters into default values.)

if you have any queries call to 9600073866